

Rim


NÁVOD K POUŽITÍ
BEDIENUNGSANLEITUNG
OPERATING INSTRUCTIONS
MODE D'EMPLOI
INSTRUKCJA UŻYTKOWANIA
HASZNÁLATI ÚTMUTATÓ

FLASH FL 744 NPR
FLASH FL 745




SYNCHRO STA

1

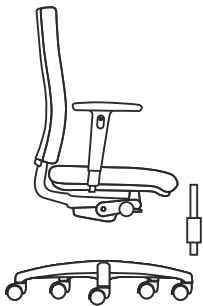


2

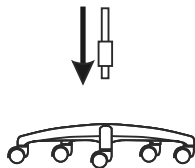



3




4

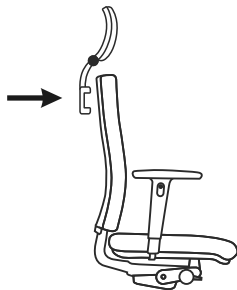


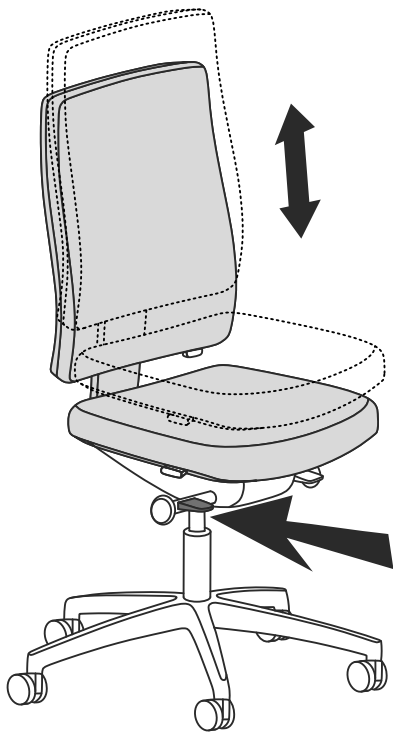


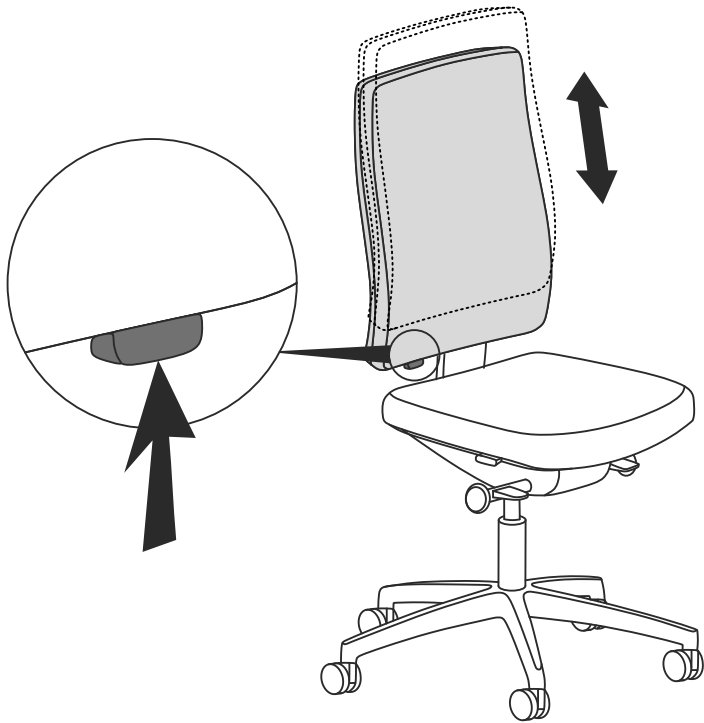


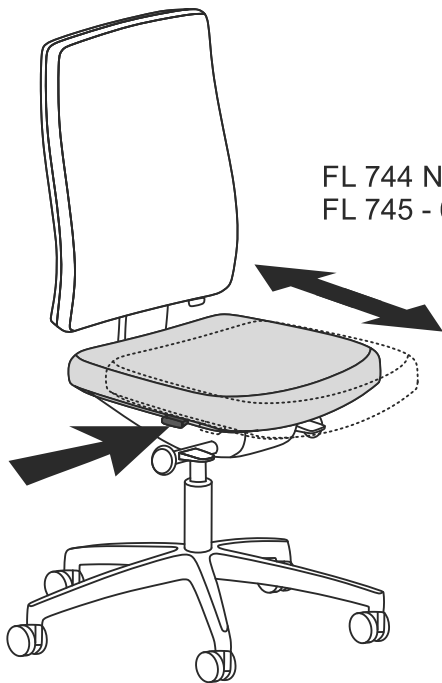



FL 744 NPR - 10 cm
FL 745 - 6 cm



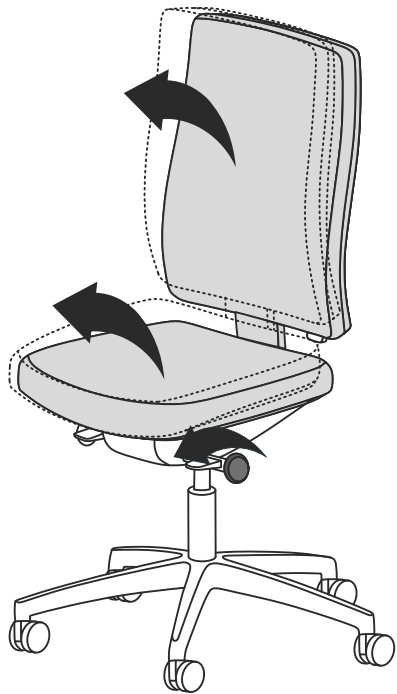


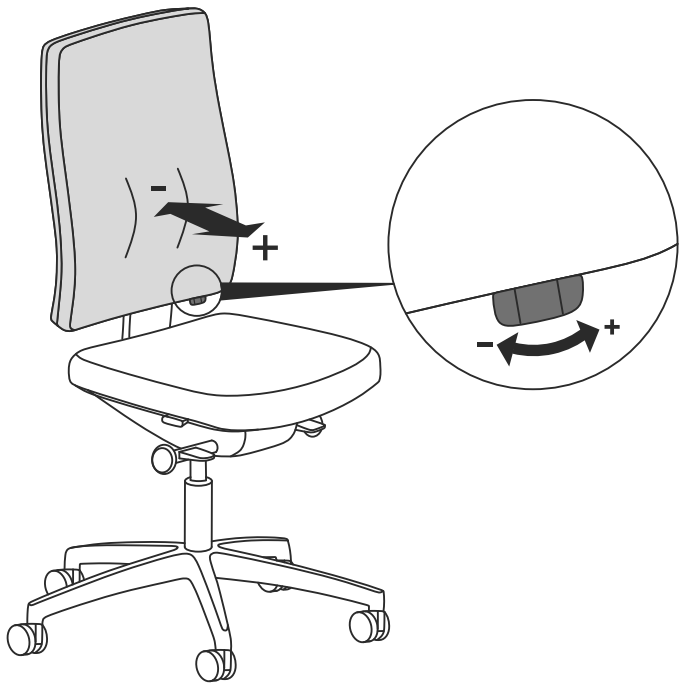





STOP IN 4 POSITION

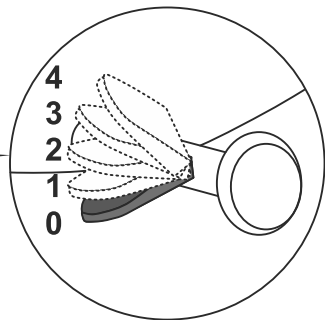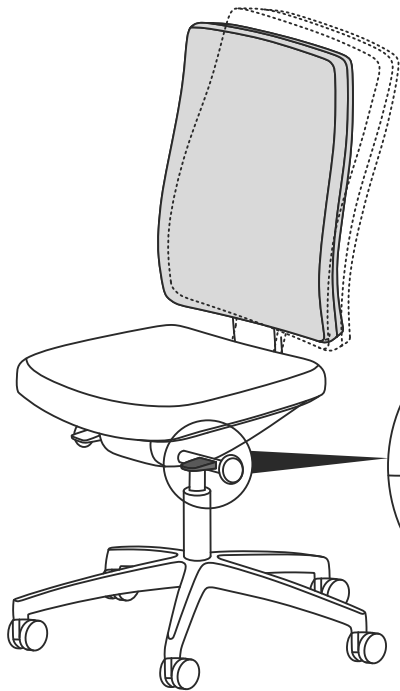



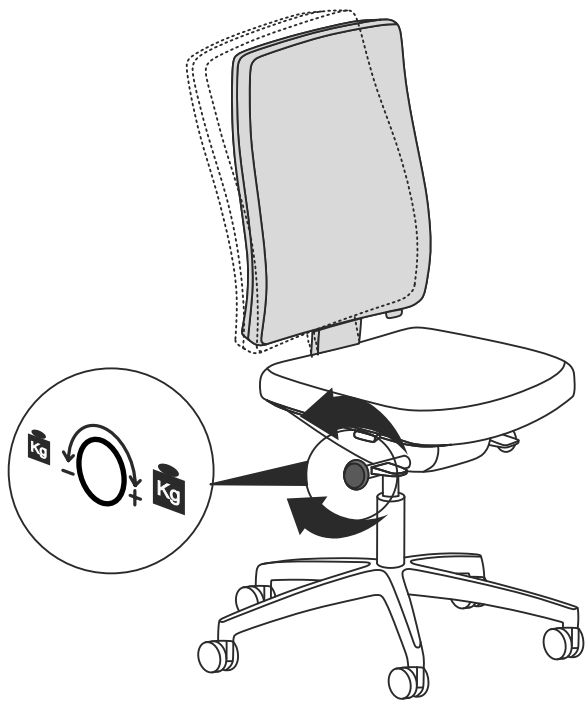


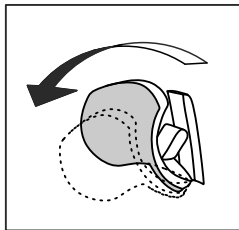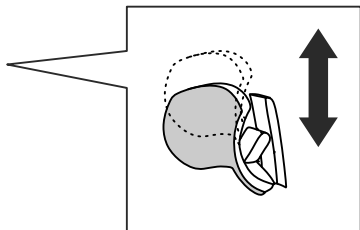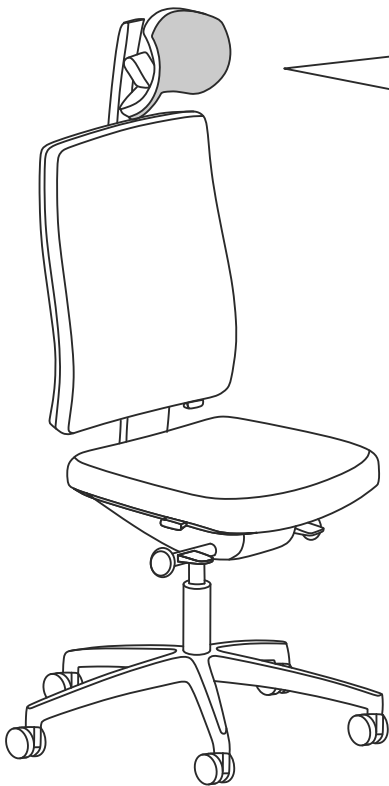




089 NPR 4F

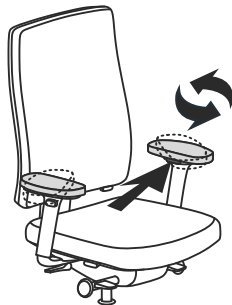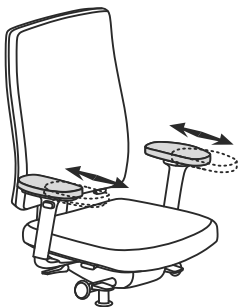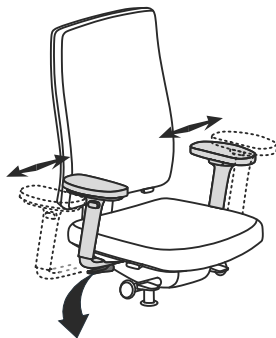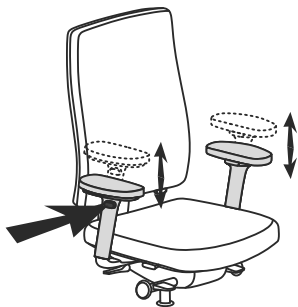

086 3F

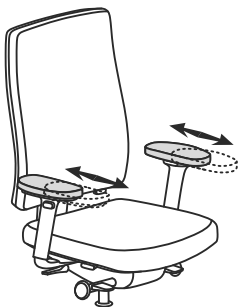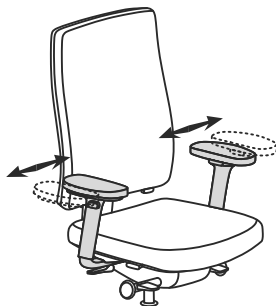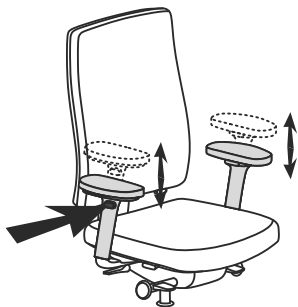

088 4F

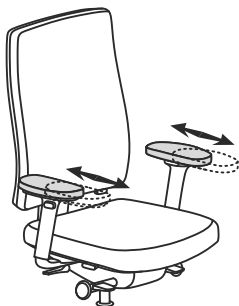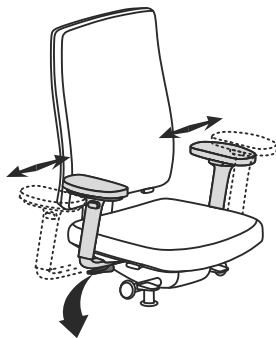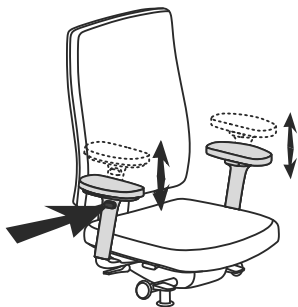

Rim

RIM CZ a.s.

Dr. E. Beneše 1015
765 02 Otrokovice
CZECH REPUBLIC

Tel.: +420 577 112 640

E-mail: info@rim.cz

www.rim.cz

